


De plaatser van dit meubel is verantwoordelijk voor het correct en stevig ophangen.
 Le poseur de ce mobilier est responsable d'accrocher correctement et solidement.
 The installer of this furniture is responsible for the correct and tightly hanging.

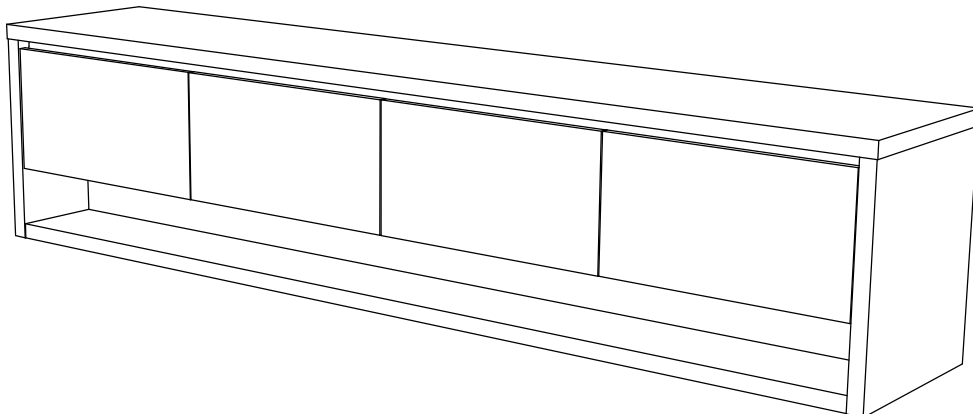

	Art. Nr.	Aantal
1	OZIKUB062XL	1x
2	OZIKUB062XR	1x
3	OBZKUB062X	3x
4	OBLKUB004X	1x
5	ODRKUB062X	4x
6	OPLKUB004X	1x
7	OGRKUB004X	1x
8	ORUKUB062XL	1x
9	ORUKUB062XR	1x
10	ORUKUB063XM	2x
11	BLIKUB004	1x
12	OGRKUB004XV	1x
13	OLPKUB003XZ	2x
14	OLPKUB003XM	2x

1

A
4x
BSCH513

B
4x
BSCH514

D
4x
BBSG220

E
4x
BBSG270

C
4x

1

2

A+B+C

D

E

3

D
8x
BBSG220

8x

2

3

D

4

D
4x
BBSG220

F
4x
BSCH511

4x

3


4

D

F



5 **E** 10x BBSG270

G 3x BBSG193

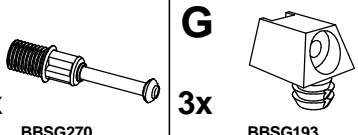

6 **H** 8x BSCH501

I 4x BBSG666

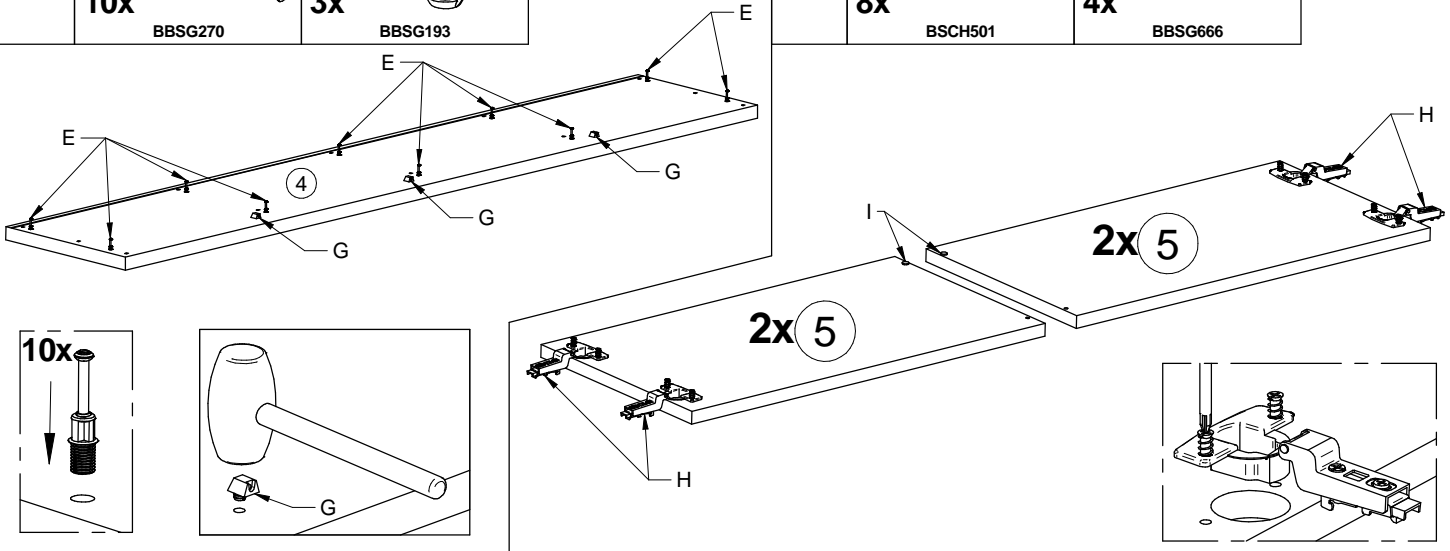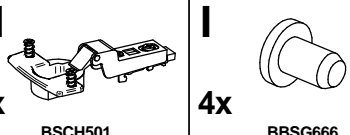

7 **J** 9x BBSG137

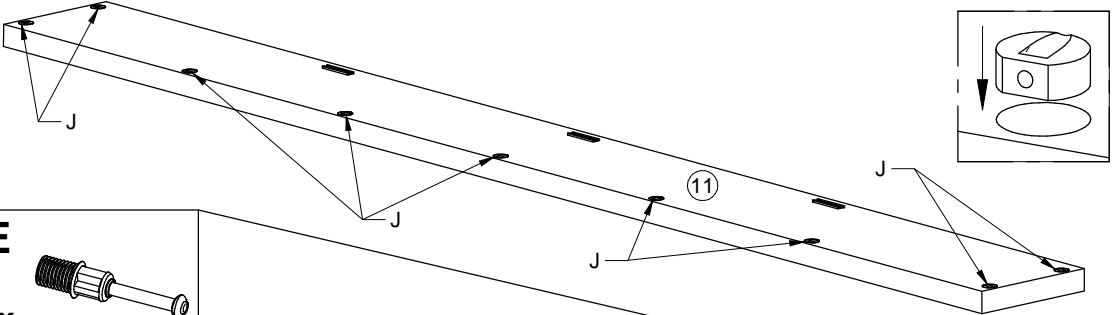
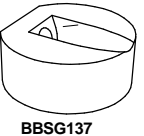


Diagram showing the assembly of a long sideboard panel (11). Part J (corner brackets) is used to secure the panel to the wall. A circular callout '11' is present near the corner bracket J. An inset diagram shows a corner bracket J being inserted into the corner of the panel.

8 **D** 7x BBSG220

E 3x BBSG270

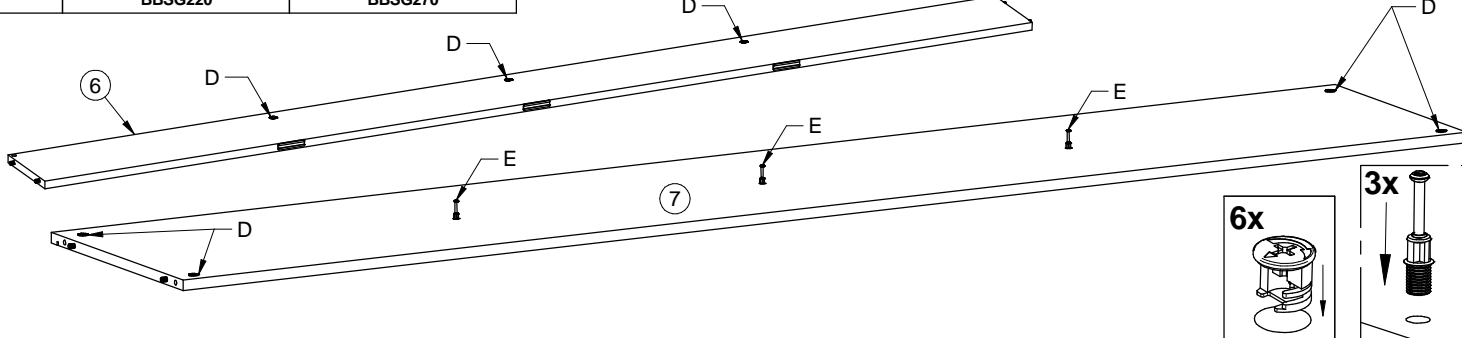



Diagram showing the assembly of two long sideboard panels (6 and 7). Part D (brackets) is used to secure the panels to the wall. Part E (screws) is used to secure the panels together. A circular callout '6' is present near the wall bracket D. A circular callout '7' is present near the panel E. Two inset diagrams show: 1) A bracket D being inserted into a hole in the panel. 2) A screw E being inserted into a hole in the panel.

9








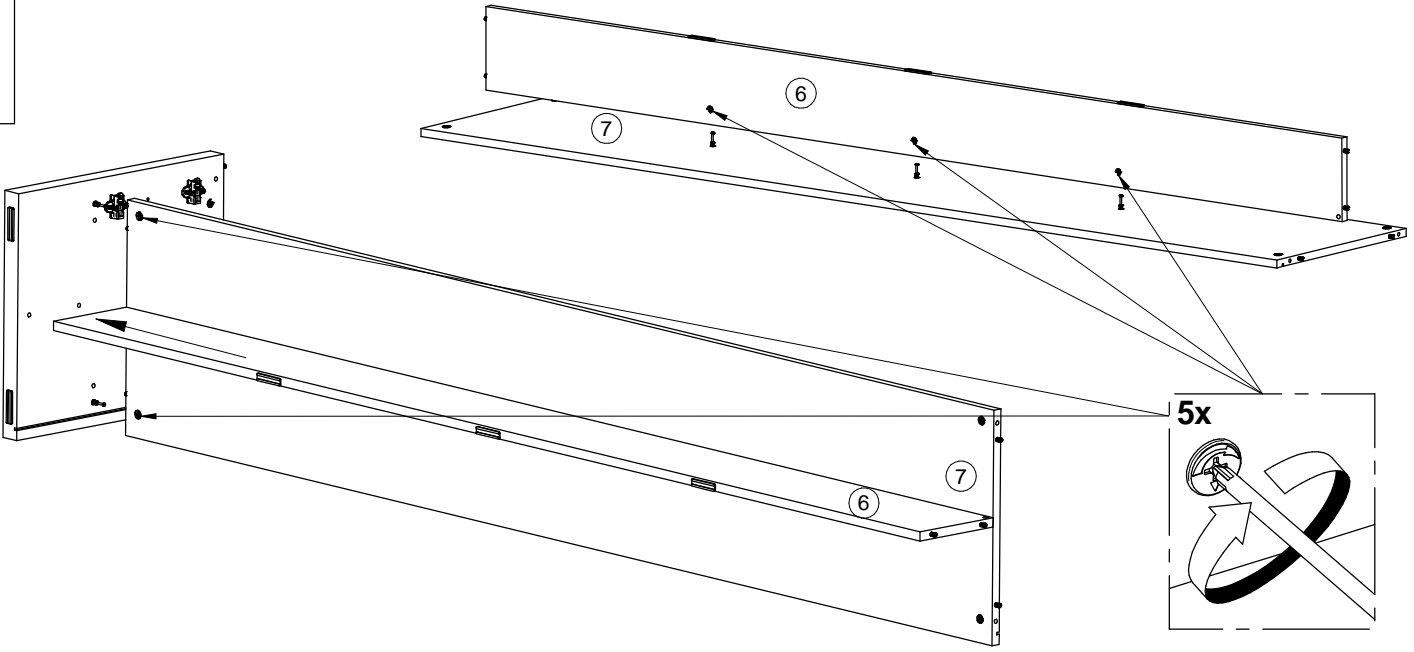


Diagram showing the final assembly of the sideboard. Part I (screws) is used to secure the panels to the wall. A circular callout '5' is present near the wall bracket I. An inset diagram shows a screw I being inserted into a hole in the panel, with a curved arrow indicating the direction of insertion.

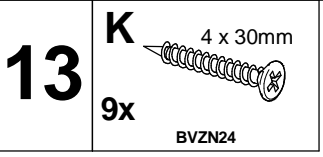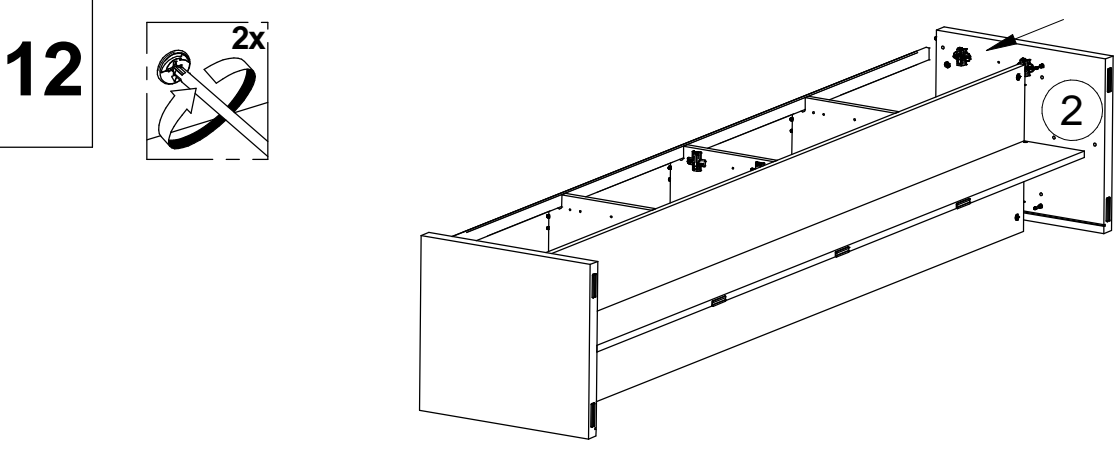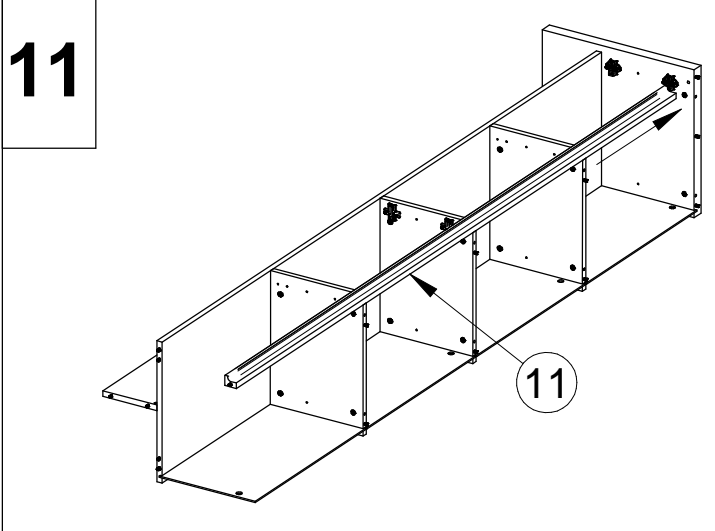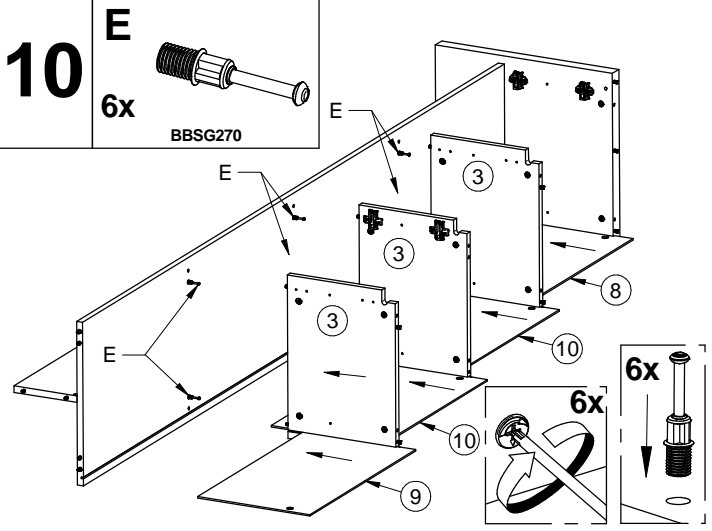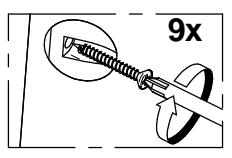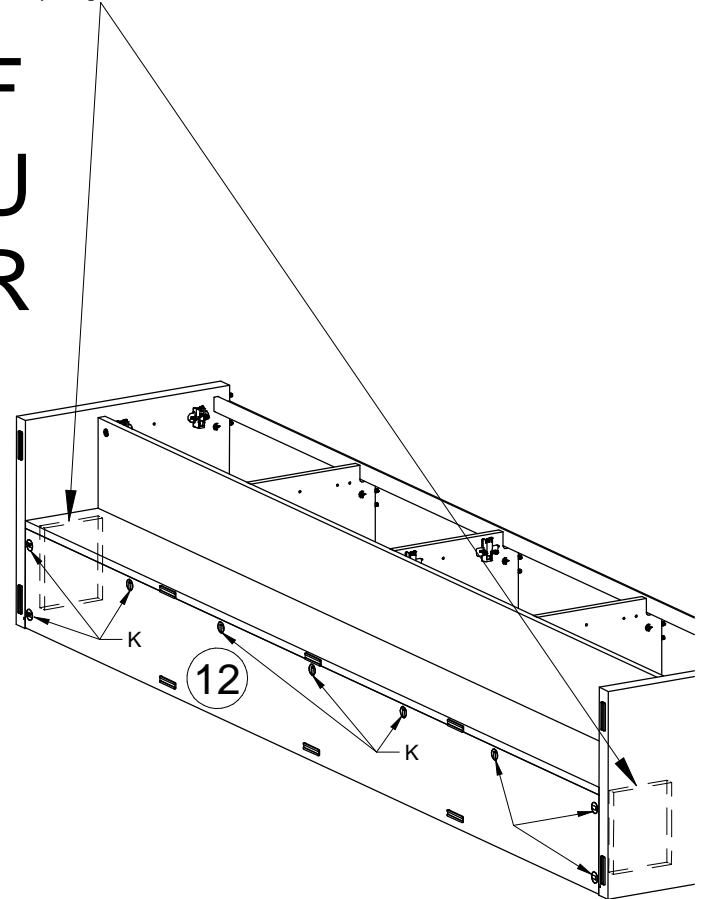

Witte verpakkingsblokken 188 x 150 x 20mm in het pak van de kastbodem.
 Blocques d'emballage blanc 188 x 150 x 20mm dans le paquet de base de l'armoire.
 White packing blocks 188 x 150 x 20mm in the package of the cabinet base.


OF
OR

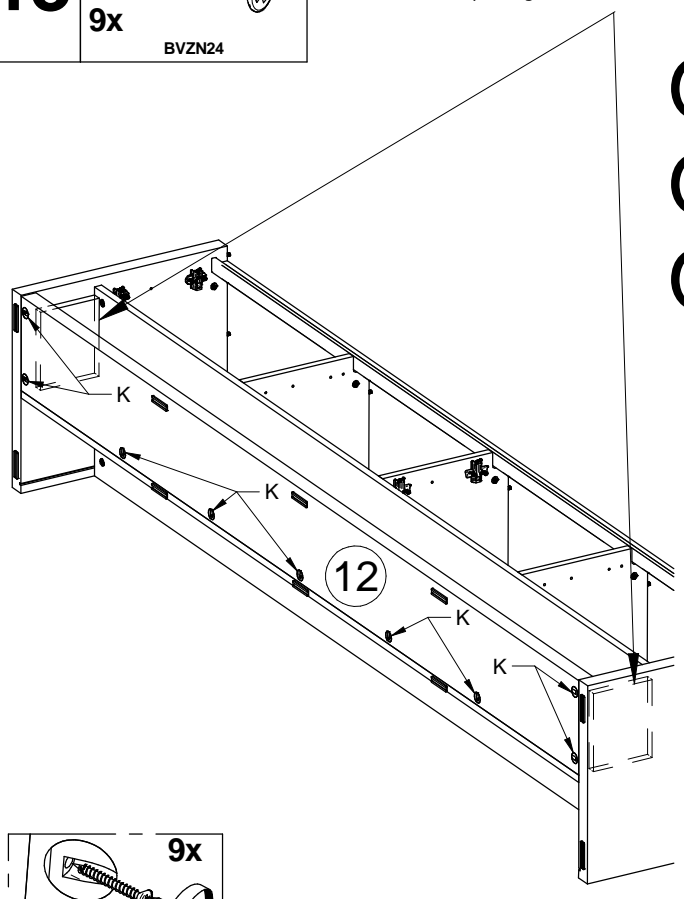





13b

OPTIE : NU MONTAGE LED VERLICHTING - KUBOS
OPTION: MAINTENANT MONTAGE ÉCLAIRAGE LED - KUBOS
OPTION: NOW INSTALLATION LED LIGHTING - KUBOS




14

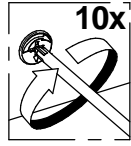


15

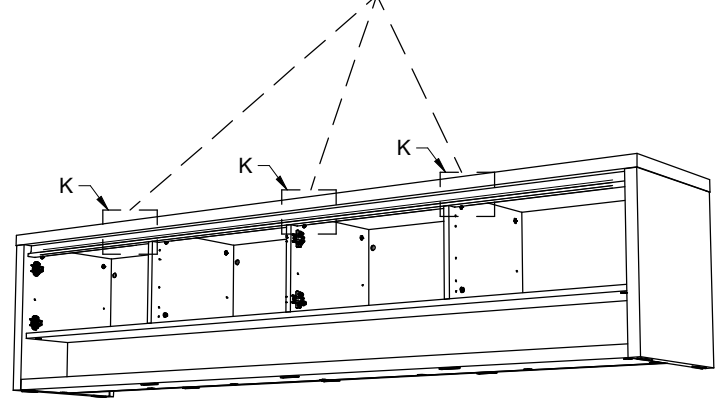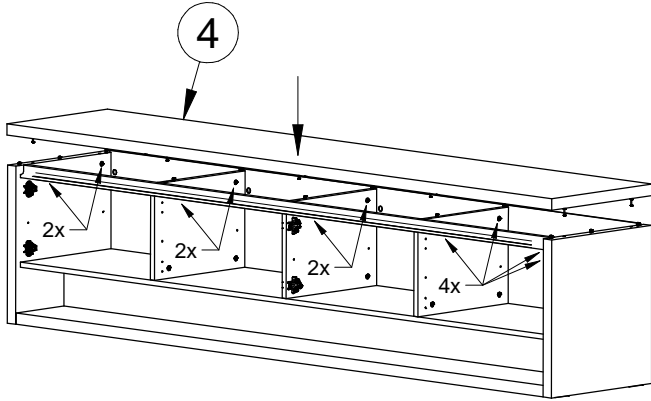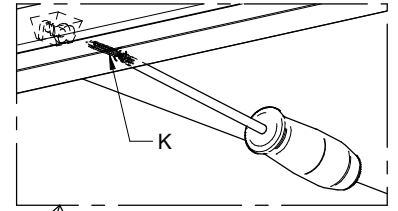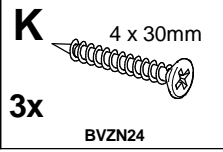




16


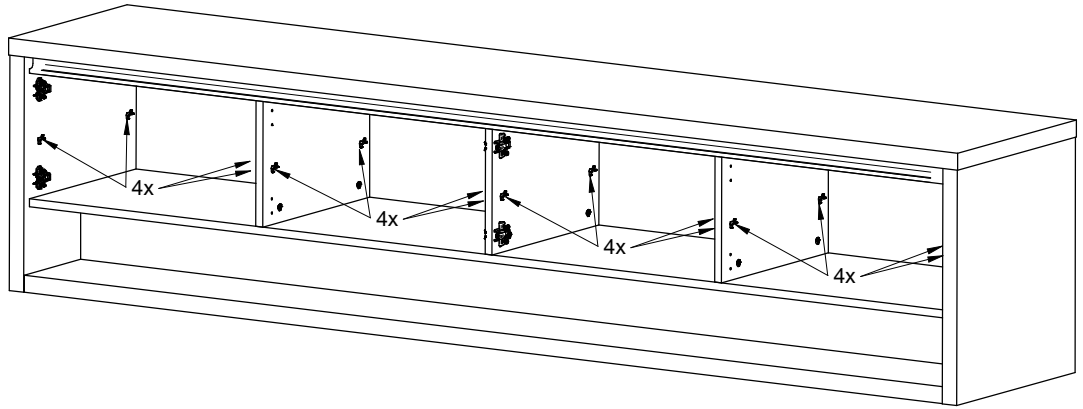

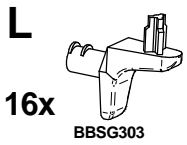


17

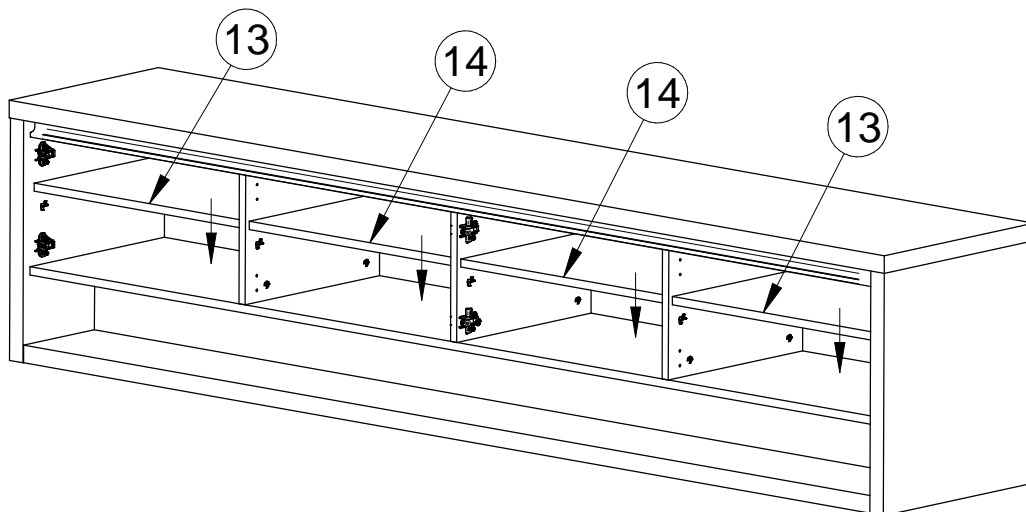


18

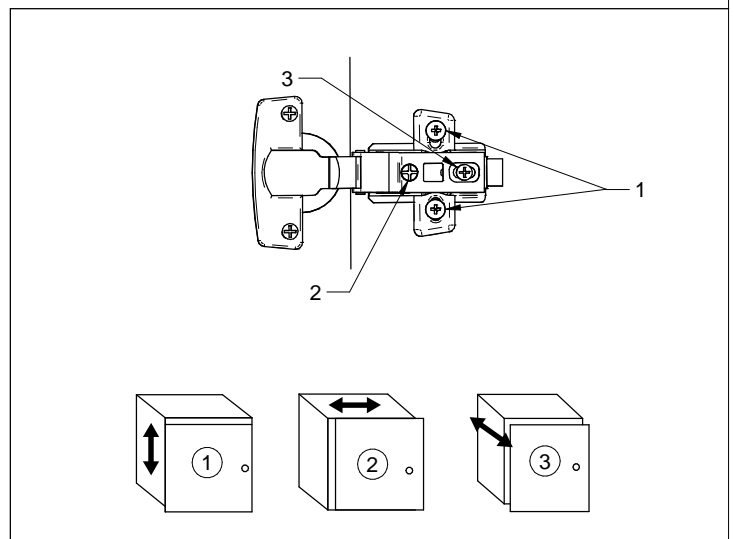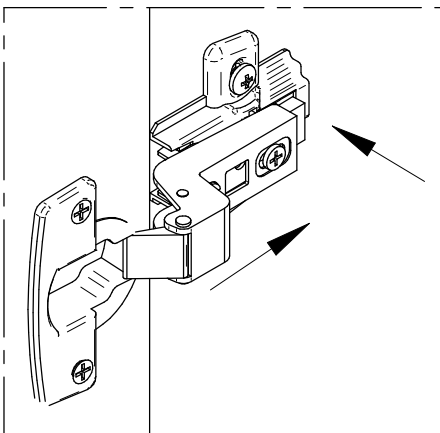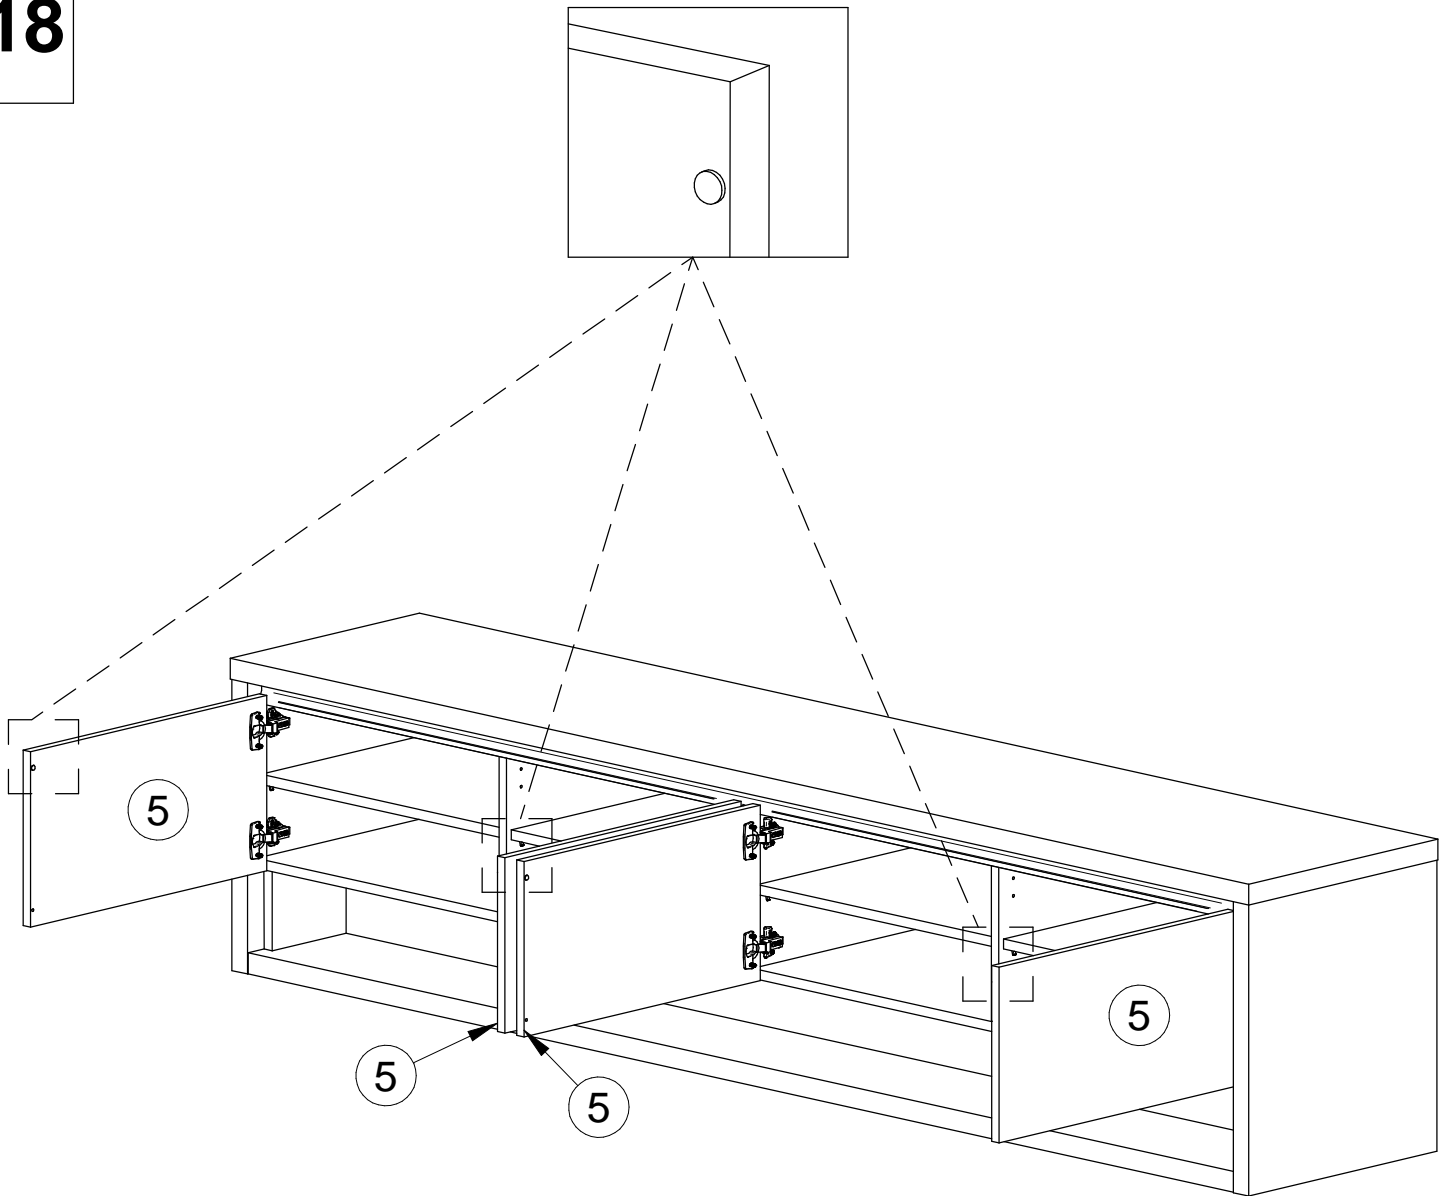

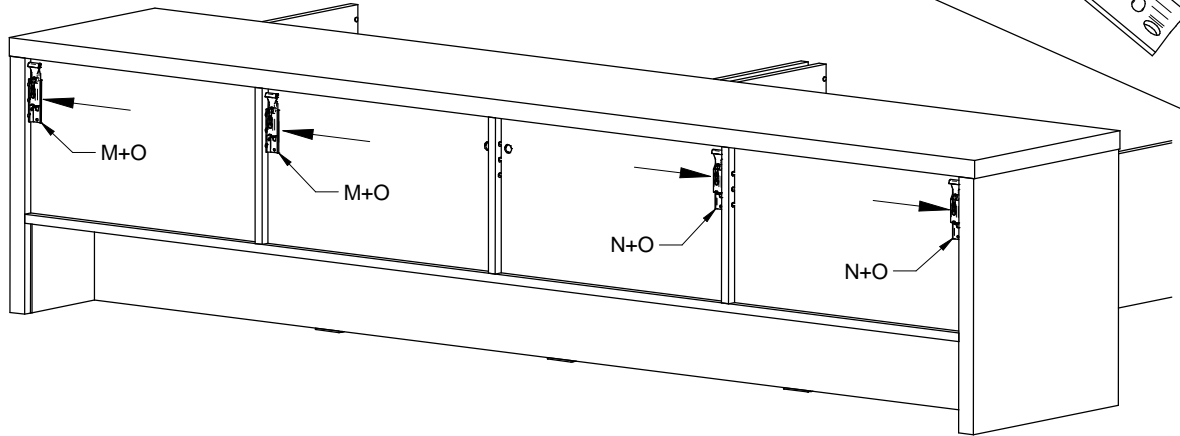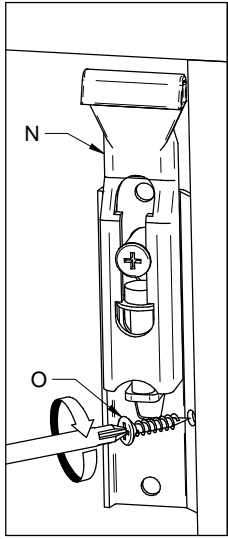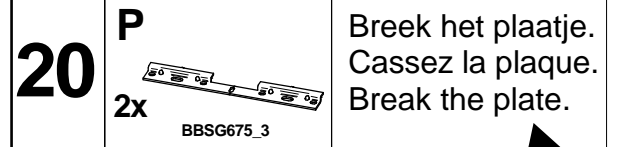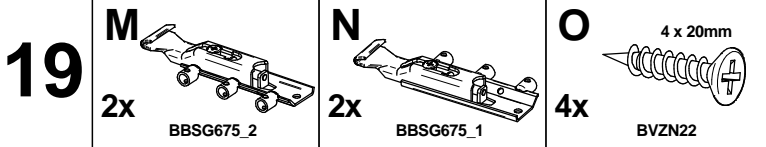**21**


Positie kast markeren op een stevige, massieve muur.
Marquer le position de l'armoire sur un mur solide et massif.
Mark the position of the cabinet on a solid and steady wall.

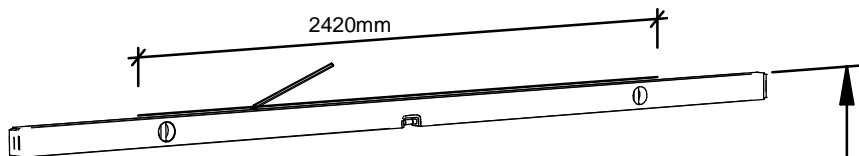


Hoogte tussen vloer en de bovenkant kast - 50mm
 Hauteur entre sol et le dessus de l'armoire - 50mm
 Height between floor and cabinet top - 50mm

22



Midden van de kast.
 Centre de l'armoire.
 Centre of the cabinet.

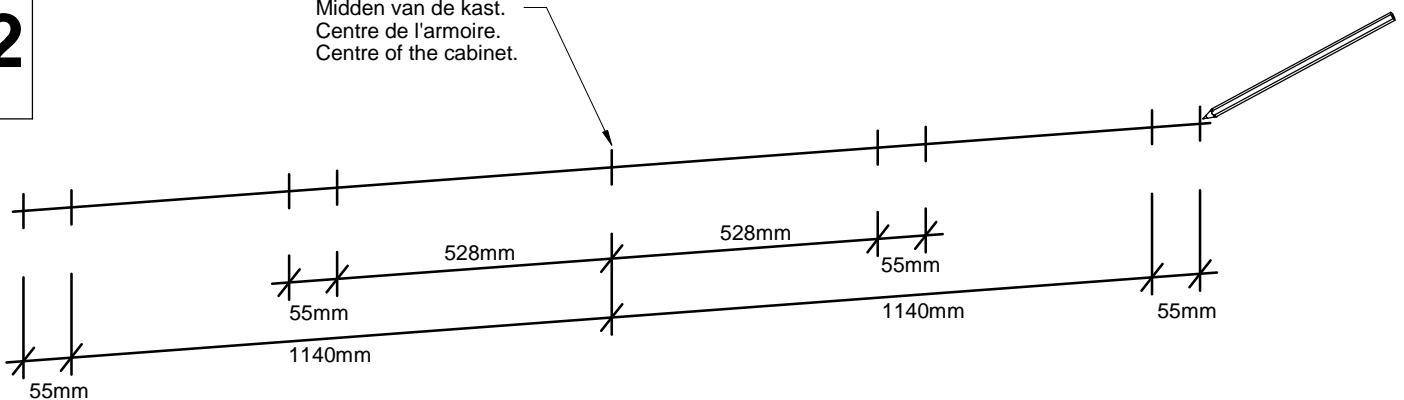



23

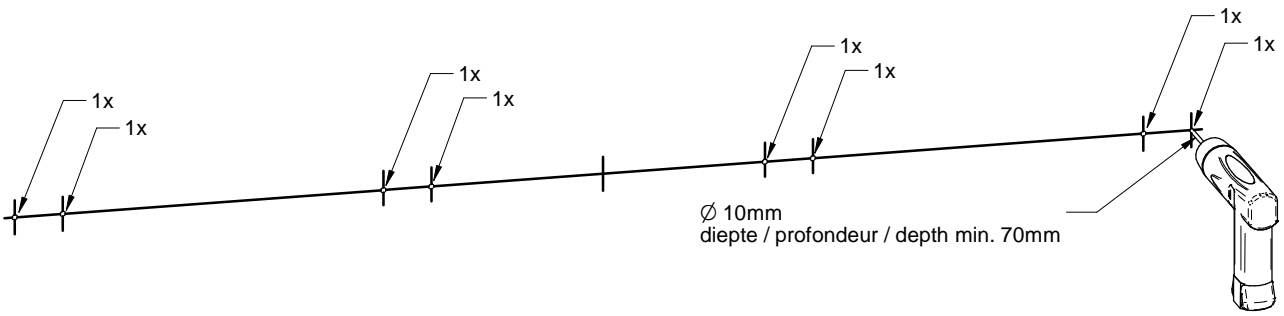


24

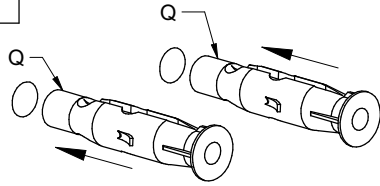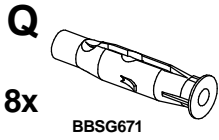




25

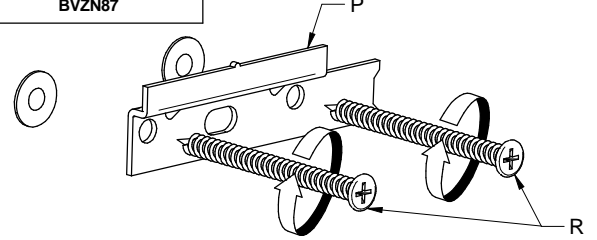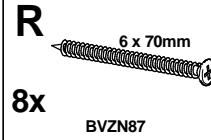

26

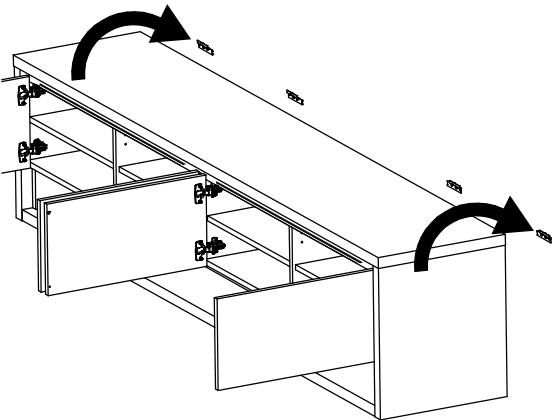

27

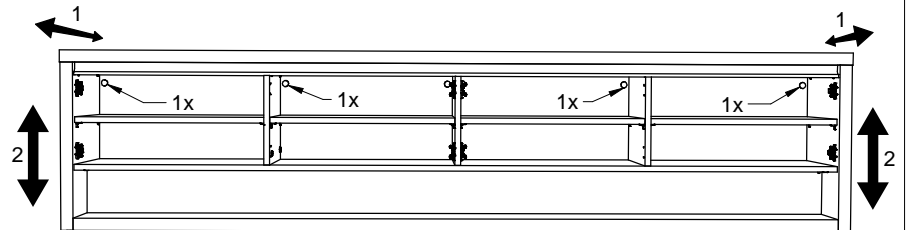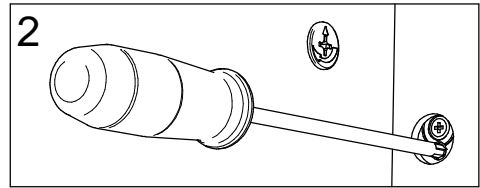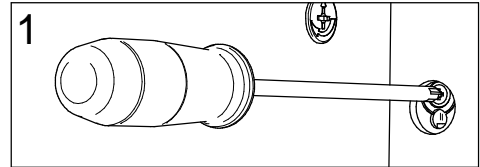

28

